


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

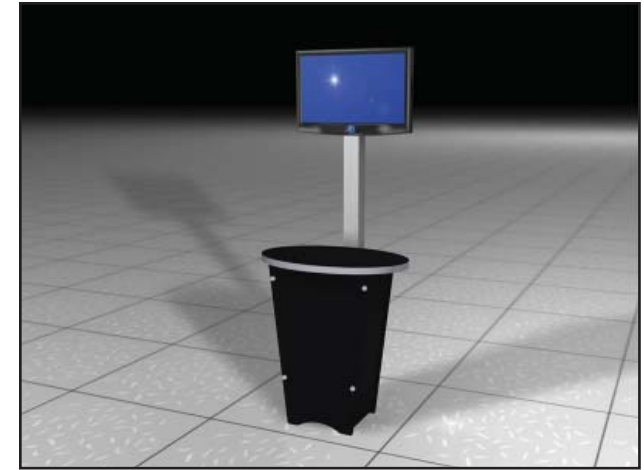

Modul Vertical Stand

Item	Qty.	Description
1	1	Base Plate
2	1	36" h Lower Vertical Extrusion
3	1	36" h Upper Vertical Extrusion

Steps:


- 1) Attach lower vertical extrusion [2] to base plate [1]. See detail D on general info page.
- 2) Attach upper vertical extrusion [3] to lower vertical extrusion [2].



Pedestal Base

Setup:

- 3) Use standoff screws to secure the front panel with door and back panel of the pedestal to the side panels.
- 4) After assembling front, back, and side panels, slide floor into the bottom of the pedestal. The floor will sit on pins on the inside of the side panels.
- 5) After floor is in place, use Velcro attachments to install shelf.
- 6) Slide assembled base against assembled vertical stand, then secure with thumbscrews, see **NOTE**.

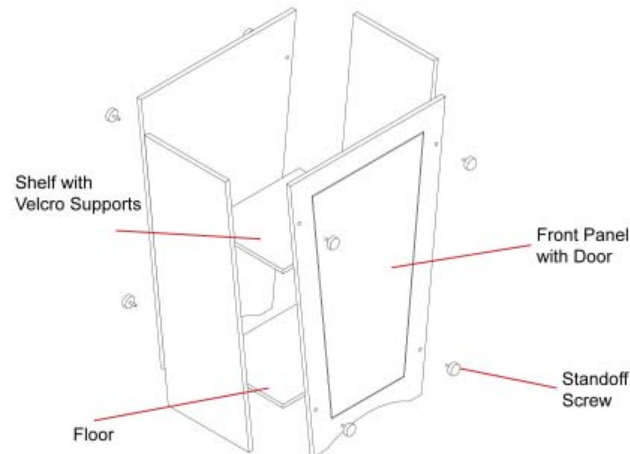

*** MONITOR MOUNT ATTACHMENT**
Attach monitor mount to vertical extrusions after assembly.



Slide Mount into Groove of Vertical Extrusion. Tighten Setscrew Attach top Plate and tighten screws

